

 
 







 

 

 

 
 
 



 






 








 
 



 
 


 

 

 




 







Original		Replacement		Original		Replacement	
	Power		Power		Scan >>		>>
	Optical / Tv Sound		TV/R		Skip >>		>>
	Function		D. Menu		Stop		Stop
	1		1		Play		Play
	2		2		Pause		Pause
	3		3		Vol +		Vol +
	4		4		Vol -		Vol -
	5		5		Mute		Mute
	6		6		Speaker Level		Options
	7		7		Mic / Echo		Info
	8		8		Sound Effect		Dual
	9		9		Home		Smart
	0		0		Night/Moon		Pre Ch
	Clear		Exit		Info / Menu		Menu
	Repeat		Text		Up / Preset +		Up
	I<< Skip		I<<		Down / Preset -		Down
	<< Scan		<<		Right / Tuning +		Right





Original	Replacement	Original	Replacement
 Left / Tuning -	 Left		
 Enter	 Ok		
 Back	 Back		
 Pop Up	 Guide		
 Sleep	 Sleep		
 Red / RDS	 Red		
 Green / PTY	 Green		
 Yellow / PTY	 Yellow		
 Blue /	 Blue		
 Power TV	 Shift + Power		
 Input Tv	 AV		
 Vol + Tv	 Shift + Vol +		
 Vol - Tv	 Shift + Vol -		
 PR/CH + Tv	 Ch +		
 PR/CH - Tv	 Ch -		

