



Original	Replacement	Original	Replacement
 TV/PC	 Eject / Surround	 0	 0
 Power	 Power	 Q.View	 Display / Media
 Input	 AV / Input / RDS	 Menu	 Menu / Home
 TV/Radio	 TV/Radio /	 Up	 Up
 Text	 Text / Goto	 Exit	 Exit / Cancel / Clear
 I-II	 Audio / Lang I/II	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Info	 Info / Angle
 3	 3	 Down	 Down
 4	 4	 Guide	 Guide / EPG / -/-
 5	 5	 Vol+	 Vol+
 6	 6	 Return	 Back / Return
 7	 7	 PR+	 CH+ / Page+
 8	 8	 Vol-	 Vol-
 9	 9	 PR-	 CH- / Page-
 List	 Smart / List	 FAV	 Fav / Marker / PC





	Original	Replacement	Original	Replacement
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Stop	 Stop / Hold		
	Yellow	 Yellow / YouTube / Repeat		
	Play	 Play / Slow		
	Blue	 Blue / Prime Video / Random		
	Pause	 Pause / Step / Freeze		
	Q.Menu	 D.Menu / Top		
	<<	 << / Tune-		
	T.OPT	 Setup / OPT /		
	>>	 >> / Tune+		
	Subtitle	 Subtitle / EQ		
	Mark	 Picture / Format		

