
 


 




 

 





 



 







 







 










 
















 











Original	Replacement	Original	Replacement
 Standby	 Power	 9	 9
 Mute	 Mute / Dimmer	 Music/Movie/Phot	 Sound / Title
 Fav	 Fav / Marker / PC	 0/AV	 0
 World	 Smart / List	 Info	 Info / Angle
 TV/Radio	 TV/Radio /	 Vol+	 Vol+
 Text	 Text / Goto	 P↔P	 Zoom / Size
 Mail	 Display / Media	 P+	 CH+ / Page+
 Lib	 D.Menu / Top	 Vol-	 Vol-
 Timers	 Sleep / Timer	 Opt	 Setup / OPT /
 1	 1	 P-	 CH- / Page-
 2	 2	 Red	 Red / Netflix / Search
 3	 3	 Green	 Green / APP / Repeat
 4	 4	 Yellow	 Yellow / YouTube / Repeat
 5	 5	 Blue	 Blue / Prime Video / Random
 6	 6	 EPG	 Guide / EPG / -/--
 7	 7	 Up	 Up
 8	 8	 Exit	 Exit / Cancel / Clear

Original	Replacement	Original	Replacement
 Standby	 Power	 9	 9
 Mute	 Mute / Dimmer	 Music/Movie/Phot	 Sound / Title
 Fav	 Fav / Marker / PC	 0/AV	 0
 World	 Smart / List	 Info	 Info / Angle
 TV/Radio	 TV/Radio /	 Vol+	 Vol+
 Text	 Text / Goto	 P↔P	 Zoom / Size
 Mail	 Display / Media	 P+	 CH+ / Page+
 Lib	 D.Menu / Top	 Vol-	 Vol-
 Timers	 Sleep / Timer	 Opt	 Setup / OPT /
 1	 1	 P-	 CH- / Page-
 2	 2	 Red	 Red / Netflix / Search
 3	 3	 Green	 Green / APP / Repeat
 4	 4	 Yellow	 Yellow / YouTube / Repeat
 5	 5	 Blue	 Blue / Prime Video / Random
 6	 6	 EPG	 Guide / EPG / -/--
 7	 7	 Up	 Up
 8	 8	 Exit	 Exit / Cancel / Clear





Original	Replacement	Original	Replacement
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Back		Back / Return
	Subtitle		Subtitle / EQ
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Audio		Audio / Lang I/II
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode

