 




 


 




 

 


 

 

 

 
 





Original	Replacement
 Power	 Power
 Eject	 Eject / Surround
 Tv/Radio	 TV/Radio /
 Red/Goto	 Red / Netflix / Search
 Green/Angle	 Green / APP / Repeat
 Yellow/Repeat	 Yellow / YouTube / Repeat
 Blue/A-B	 Blue / Prime Video / Random
 FAV	 Fav / Marker / PC
 Text	 Text / Goto
 Hold/Freeze	 Shift + Stop /
 D.Menu/Guide	 D.Menu / Top
 Subtitle	 Subtitle / EQ
 Zoom/Size	 Zoom / Size
 Aspect	 Shift + Picture / Format
 Subpage	 Smart / List
 Media	 Shift + Display / Media
 Pause	 Pause / Step / Freeze

Original	Replacement
 Play	 Play / Slow
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+
 D.Setup	 Setup / OPT /
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 I<< / Preset-	 I<< / Preset-
 I>> / Preset+	 I>> / Preset+
 Menu	 Menu / Home
 Up	 Up
 Lang/Audio	 Audio / Lang I/II
 Left	 Left
 OK	 OK
 Right	 Right
 Sleep	 Sleep / Timer
 Down	 Down
 Title/Exit	 Exit / Cancel / Clear





Original		Replacement	
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/-		Guide / EPG / -/-
	0		0

Original		Replacement	
	Recall		Back / Return
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title

