




 

 













 













 
 


 







 







 

 





 





 

 





 

 






Original	Replacement	Original	Replacement
 Power	 Power	 Vol-	 Vol -
 PP	 Pre Ch	 Up	 Up
 Mute	 Mute	 Down	 Down
 I-II	 Dual	 Right	 Right
 P<P	 Back	 Left	 Left
 -/--	 Guide	 M	 Ok
 1	 1	 PR+	 Ch +
 2	 2	 PR-	 Ch -
 3	 3	 M	 Menu
 4	 4	 Red/Sound	 Red
 5	 5	 Green/Picture	 Green
 6	 6	 Yellow/Feature	 Yellow
 7	 7	 Blue/Install	 Blue
 8	 8	 TV	 TV/R
 9	 9	 AV	 AV
 0	 0	 [≡]	 Text
 Vol+	 Vol +	 [≡o]	 Smart





Original	Replacement	Original	Replacement
 [=+]	 Subt		
 [=x]	 Options		
 [.:≡]	 Media		
 [=?]	 Format		
 [=i]	 List		
 [=◇]	 3D		
 [i]/Info	 Info		

