



Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Display	 Display / Media
 8	 8	 Vol+	 Vol+
 9	 9	 MTS	 Smart / List
 DTV/ATV	 Shift + TV/Radio / Program	 CH+	 CH+ / Page+
 0	 0	 Vol-	 Vol-
 Recall	 Back / Return	 Aspect	 Shift + Picture / Format
 P.Mode	 Picture / Format	 CH-	 CH- / Page-
 S.Mode	 Sound / Title	 FAV/List	 Fav / Marker / PC
 Sleep	 Sleep / Timer	 Media	 Shift + Display / Media





Original	Replacement		
	Freeze		Pause / Step / Freeze
	Guide		Guide / EPG / --
	<<		<< / Tune-
	>>		>> / Tune+
	<</Cancel		<< / Preset-
	>> /Sub.Pg		>> / Preset+
	Stop/Index		Stop / Hold
	Play/Pause/Timeshift		Play / Slow
	Tv/Radio		TV/Radio /
	Subtitle		Subtitle / EQ
	Reveal	+	Shift + Back / Return
	Size		Zoom / Size
	Hold	+	Shift + Stop /
	Text		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat

Original	Replacement		
	Cyan		Blue / Prime Video / Random

