




 
 
 
 
 
 
 

 
 
 

 
 
 
 
 



 

 
 
 

 


 
 
 
 

 
 
 
 
 

 
 
 
 
 

 



 






 













 



Original	Replacement	Original	Replacement
 Power	 Power	 Chapter	 Pre Ch
 Drive Select	 Smart	 I<<	 I<<
 1	 1	 >>I	 >>I
 2	 2	 <<	 <<
 3	 3	 >>	 >>
 4	 4	 Stop	 Stop
 5	 5	 Pause/Pause Live	 Pause
 6	 6	 Play	 Play
 7	 7	 i/Status	 Info
 8	 8	 Exit	 Exit
 9	 9	 Option	 Options
 0	 0	 Return	 Back
 */Delete	 3D	 Direct Navigator	 List
 Input Select	 AV	 Function Menu	 Menu
 CH/Page Up	 Ch +	 Guide	 Guide
 CH/Page Down	 Ch -	 Up	 Up
 Prog/Check	 Sleep	 Down	 Down





Original	Replacement
 Right/II>	 Right
 <II/Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green
 Yellow/Manual Skip -10s	 Yellow
 Blue/Manual Skip +60s	 Blue
 Rec	 Rec
 Rec Mode	 Shift + Rec
 Ext Link	 Media
 Direct Tv Rec	 TV/R
 Text	 Text
 [≡◆]/STTL	 Subt
 Display	 Shift + Info
 Time Slip	 Format
 Power Tv	 Shift + Power
 AV Tv	 Shift + AV

Original	Replacement
 Vol+ Tv	 Vol +
 Vol- Tv	 Vol -
 CH+ Tv	 Shift + Ch +
 CH- Tv	 Shift + Ch -

