

 
 



 



 



 
 
 

 
 

 

 

 
 

 
 


 

 

 

 






Original	Replacement	Original	Replacement
 Power	 Power	 NICAM	 Smart
 Mute	 Mute	 Menu	 Menu
 1	 1	 Source	 AV
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 Exit	 Exit
 8	 8	 Display	 Info
 9	 9	 Vol +	 Vol +
 0	 0	 Vol -	 Vol -
 -/--	 Guide	 List	 List
 Back	 Back	 Fav List	 Pre Ch
 P.Mode	 Shift + Format	 CH +	 Ch +
 S.Mode	 Dual	 CH -	 Ch -
 Sleep	 Sleep	 TV / Radio	 TV/R





Original	Replacement	Original	Replacement
 CPG	 Media		
 Aspect	 Format		
 Freeze	 Pause		
 Index	 D. Menu		
 Cancel	 Shift + Back		
 Subpage	 Subt		
 Text	 Text		
 Reveal	 Options		
 Size	 3D		
 Hold	 Stop		
 Mix	 Rec		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Cyan	 Blue		

