




 

 

 

 



 



 
 


 




 
 

 







 

 

Original	Replacement
 Power	 Power
 Power Tv	 Shift + Power
 AV	 AV / Input / RDS
 Tv/DVD	 TV/Radio /
 Open/Close	 Eject / Surround
 AV Tv	 Shift + AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR+ Tv	 Shift + CH+ /
 4	 4
 5	 5
 6	 6
 PR- Tv	 Shift + CH- /
 7	 7
 8	 8
 9	 9

Original	Replacement
 Vol+ Tv	 Vol+
 Rec	 Rec / Rec Mode
 0	 0
 Mute	 Mute / Dimmer
 Vol- Tv	 Vol-
 << Scan	 << / Tune-
 Scan >>	 >> / Tune+
 I<< Skip	 I<< / Preset-
 >>I Skip	 >>I / Preset+
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Home	 Menu / Home
 PR+	 CH+ / Page+
 Up	 Up
 Menu/List	 D.Menu / Top
 Left	 Left





Original	Replacement
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 PR-	 CH- / Page-
 Down	 Down
 Display	 Display / Media
 O)))/Audio	 Audio / Lang I/II
 Title	 Sound / Title
 Marker	 Shift + Fav / Marker / PC
 Clear	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 FAV	 Fav / Marker / PC
 Green	 Green / APP / Repeat
 Repeat	 Shift + Green / APP /
 Yellow	 Yellow / YouTube / Repeat
 Subtitle	 Subtitle / EQ
 Blue	 Blue / Prime Video / Random

Original	Replacement
 Text	 Text / Goto
 EPG	 Guide / EPG / -/-

