



 


 

 

 

 

 

 
 
 

 
 


 



 
 










Original	Replacement
 Power	 Power
 Input	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Lang	 Dual
 TXT	 Text
 Home	 Smart
 Vol+	 Vol +
 Vol-	 Vol -

Original	Replacement
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 [i+]	 Info
 Guide	 Guide
 Back	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Rakuten TV	 Shift + Smart





	Original	Replacement		Original	Replacement
	 Netflix	 Media			
	 YouTube	 Shift + Media			
	 <<<	 <<<			
	 Pause	 Pause			
	 >>>	 >>>			
	 Rec	 Rec			
	 Play	 Play			
	 Stop	 Stop			

