 











 

 
 
 
 



 

 
 
 

 







 


 

 
 





 
 

 



 










 




 






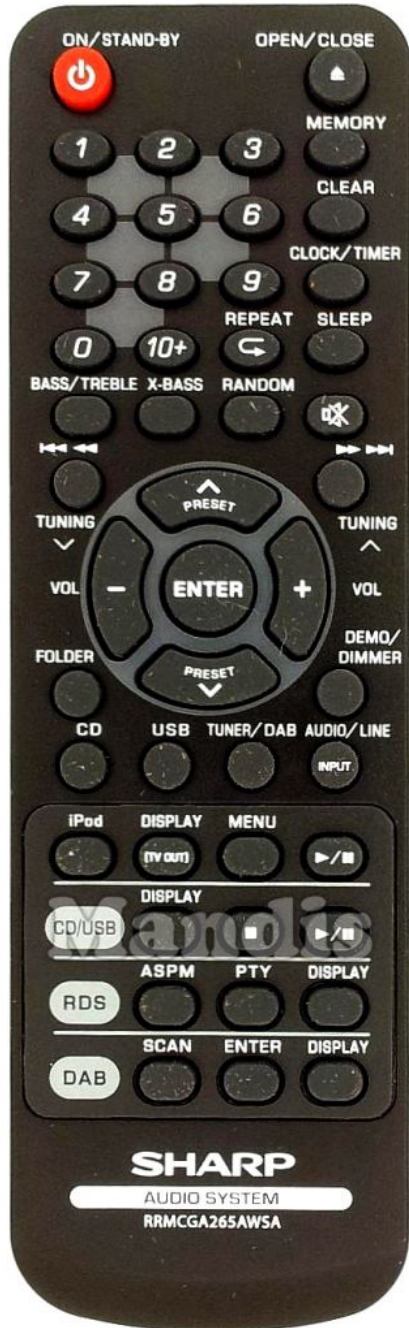



 













Original	Replacement
 On/Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10+	 Guide
 Repeat	 Text
 Open/Close	 Eject
 Memory	 Back
 Clear	 Exit
 Clock/Timer	 Shift + AV

Original	Replacement
 Sleep	 Sleep
 Bass/Treble	 Dual
 X-Bass	 Subt
 Random	 Media
 I<<<</Tuning	 I<<
 >>>>/Tuning	 >>I
 Preset Up	 Up
 Preset Down	 Down
 Enter	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Folder	 Smart
 Demo/Dimmer	 3D
 CD	 Yellow
 USB	 Blue
 Tuner/Dab	 Green





	Original	Replacement	Original	Replacement
	Input/Audio Line	 AV		
	iPod	 Red		
	(Tv Out)/Display	 TV/R		
	Menu	 Menu		
	Play/Pause	 Play		
	Display CD/USB	 Info		
	Stop CD/USB	 Stop		
	Play/Pause	 Pause		
	ASPM RDS	 Format		
	PTY RDS	 Pre Ch		
	Display RDS	 Shift + Info		
	Scan DAB	 Left		
	Enter DAB	 Shift + Ok		
	Display DAB	 Right		

