






 



 




 


 








 


 

 


 
 

 

 
 
 

 


 
 

 








 






 



 

 

 
 


Original	Replacement	Original	Replacement
 System On	 Power	 8 Tuner	 8
 Power Off	 Shift + Power	 9 Tuner	 9
 Mute	 Mute	 0 Tuner	 0
 Vol+	 Vol +	 - Tuner	 Left
 Vol-	 Vol -	 + Tuner	 Right
 Source On/Off	 AV	 A.F/P Tuner	 Pre Ch
 Phono	 Smart	 B./-/- Tuner	 Guide
 Source On/Off	 Media	 Mode Tuner	 Menu
 Tuner	 TV/R	 Memo Tuner	 Ok
 Source On/Off	 Subt	 Scroll Tuner	 Info
 1 Tuner	 1	 Cancel Tuner	 Exit
 2 Tuner	 2	 Text/Mode1 Tuner	 Text
 3 Tuner	 3	 Time/Mode 2	 Format
 4 Tuner	 4	 I<< Tuner	 Ch -
 5 Tuner	 5	 >>I Tuner	 Ch +
 6 Tuner	 6	 << Tuner	 Down
 7 Tuner	 7	 >> Tuner	 Up











 


 







 



 



 

 
 
 

 


 
 

 

 


 
 

 
 
 



 
 
 

 



 





 


Original	Replacement
 CD	 Yellow
 Source On/Off CD	 Blue
 1 CD	 Shift + 1
 2 CD	 Shift + 2
 3 CD	 Shift + 3
 4 CD	 Shift + 4
 5 CD	 Shift + 5
 6 CD	 Shift + 6
 7 CD	 Shift + 7
 8 CD	 Shift + 8
 9 CD	 Shift + 9
 0 CD	 Shift + 0
 - CD	 Shift + Left
 + CD	 Shift + Right
 A.F/P CD	 Shift + Pre Ch
 B./-/- CD	 Shift + Guide
 Mode CD	 Shift + Menu

Original	Replacement
 Memo CD	 Shift + Ok
 Scroll CD	 Shift + Info
 Cancel CD	 Shift + Exit
 Text/Mode1 CD	 Shift + Text
 Time/Mode2 CD	 Shift + Format
 Play CD	 Play
 I<< CD	 I<<
 >>I CD	 >>I
 << CD	 <<
 Stop CD	 Stop
 >> CD	 >>
 Pause CD	 Pause
 Open/Close CD	 Eject





Original	Replacement	Original	Replacement
 System On	 Power	 + CDR	 Right
 Power Off	 Shift + Power	 - CDR	 Left
 Source On/Off	 AV	 Mode CDR	 Menu
 Mute	 Mute	 Memo CDR	 Ok
 Vol+	 Vol +	 Scroll CDR	 Info
 Vol-	 Vol -	 Cancel CDR	 Exit
 CD-R	 Smart	 Text/Mode1	 Text
 1 CDR	 1	 Time/Mode2	 Format
 2 CDR	 2	 I<< CDR	 I<<
 3 CDR	 3	 Play CDR	 Play
 4 CDR	 4	 >>I CDR	 >>I
 5 CDR	 5	 << CDR	 <<
 6 CDR	 6	 Stop CDR	 Stop
 7 CDR	 7	 >> CDR	 >>
 8 CDR	 8	 Pause CDR	 Pause
 9 CDR	 9	 Open/Close	 Eject
 0 CDR	 0	 AUX1	 Media



















 


 




 


 

 

 

 
 
 
 
 



 

 
 
 


 
 

 

 



 

 

 

 






Original	Replacement
 Source On/Off	 Subt
 1 AUX1	 Shift + 1
 2 AUX1	 Shift + 2
 3 AUX1	 Shift + 3
 4 AUX1	 Shift + 4
 5 AUX1	 Shift + 5
 6 AUX1	 Shift + 6
 7 AUX1	 Shift + 7
 8 AUX1	 Shift + 8
 9 AUX1	 Shift + 9
 0 AUX1	 Shift + 0
 + AUX1	 Shift + Right
 - AUX1	 Shift + Left
 A.F/P AUX1	 Pre Ch
 B./- AUX1	 Guide
 Mode AUX1	 Shift + Menu
 Memo AUX1	 Shift + Ok

Original	Replacement
 Text/Mode1	 Shift + Text
 Time/Mode2	 Shift + Format
 I<< AUX1	 Shift + I<<
 >>I AUX1	 Shift + >>I
 >> AUX1	 Shift + >>
 <> AUX1	 Rec
 << AUX1	 Shift + <<
 Pause AUX1	 Shift + Pause
 Stop AUX1	 Shift + Stop
 Play AUX1	 Shift + Play
 Source On/Off	 Shift + AV

















 


 




 


 

 

 

 

 
 
 



 

 
 
 


 
 

 

 



 

 

 

 








Original	Replacement	Original	Replacement
 System On	 Power	 + Tape	 Right
 Power Off	 Shift + Power	 - Tape	 Left
 Mute	 Mute	 A.F/P Tape	 Pre Ch
 Vol+	 Vol +	 B/-/- Tape	 Guide
 Vol-	 Vol -	 Mode Tape	 Menu
 Tape	 Smart	 Memo Tape	 Ok
 Source On/Off	 AV	 Cancel Tape	 Exit
 1 Tape	 1	 Text/Mode1	 Text
 2 Tape	 2	 Time/Mode2	 Format
 3 Tape	 3	 I<< Tape	 I<<
 4 Tape	 4	 Play Tape	 Play
 5 Tape	 5	 >>I Tape	 >>I
 6 Tape	 6	 << Tape	 <<
 7 Tape	 7	 Stop Tape	 Stop
 8 Tape	 8	 >> Tape	 >>
 9 Tape	 9	 <> Tape	 Rec
 0 Tape	 0	 Pause Tape	 Pause





Original	Replacement	Original	Replacement
 System On	 Power	 + MD	 Right
 Power Off	 Shift + Power	 - MD	 Left
 Mute	 Mute	 A.F/P MD	 Pre Ch
 Vol+	 Vol +	 B/-/-- MD	 Guide
 Vol-	 Vol -	 Mode MD	 Menu
 MD	 Smart	 Memo MD	 Ok
 Source On/Off MD	 AV	 Scroll MD	 Info
 1 MD	 1	 Cancel MD	 Exit
 2 MD	 2	 Time/Mode2 MD	 Format
 3 MD	 3	 I<< MD	 I<<
 4 MD	 4	 Play MD	 Play
 5 MD	 5	 >>I MD	 >>I
 6 MD	 6	 << MD	 <<
 7 MD	 7	 Stop MD	 Stop
 8 MD	 8	 >> MD	 >>
 9 MD	 9	 Pause MD	 Pause
 0 MD	 0	 Open/Close MD	 Eject





Original	Replacement
 AUX2	 Media
 Source On/Off	 Shift + AV
 1 AUX2	 Shift + 1
 2 AUX2	 Shift + 2
 3 AUX2	 Shift + 3
 4 AUX2	 Shift + 4
 5 AUX2	 Shift + 5
 6 AUX2	 Shift + 6
 7 AUX2	 Shift + 7
 8 AUX2	 Shift + 8
 9 AUX2	 Shift + 9
 0 AUX2	 Shift + 0
 + AUX2	 Shift + Right
 - AUX2	 Shift + Left
 A.F/P AUX2	 Shift + Pre Ch
 B./- AUX2	 Shift + Guide
 Mode AUX2	 Shift + Menu

Original	Replacement
 Memo AUX2	 Shift + Ok
 Text/Mode1	 Text
 Time/Mode2	 Shift + Format
 I<< AUX2	 Shift + I<<
 Play AUX2	 Shift + Play
 << AUX2	 Shift + <<
 Open/Close	 Shift + Eject
 >> AUX2	 Shift + >>
 <> AUX2	 Rec
 >>I AUX2	 Shift + >>I
 Stop AUX2	 Shift + Stop
 Pause AUX2	 Shift + Pause

