
 




 







Original		Replacement		Original		Replacement	
	Power		Power		Red		Red
	Viera Tools		Smart		Green		Green
	Tv Input		TV/R		Yellow		Yellow
	AV Input		AV		Blue		Blue
	Menu		Menu		Vol+		Vol +
	Text		Text		Vol-		Vol -
	[≡◆]/STTL		Subt		Mute		Mute
	Guide		Guide		[+]/Aspect		3D
	i		Info		CH+		Ch +
	X/Exit		Exit		CH-		Ch -
	Option		Options		1		1
	Back/Return		Back		2		2
	Up		Up		3		3
	Down		Down		4		4
	Right		Right		5		5
	Left		Left		6		6
	OK		Ok		7		7



