



 


 
 



 

 










 






 

 



 



 






 
 

 
 
 
 
 
 












 
 

 

 


 
 

 












 



 


 
 
 

 






Original	Replacement	Original	Replacement
 Power	 Power	 PC	 Pre Ch
 Input1	 Shift + 1	 [II]	 3D
 Input2	 Shift + 2	 [< >]	 Format
 Input3	 Shift + 3	 [●]	 AV
 Input4	 Shift + 4	 P+	 Ch +
 Input5	 Shift + 5	 P-	 Ch -
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	 Mute	 Mute
 4	 4	 Power Source	 Shift + Power
 5	 5	 Return	 Back
 6	 6	 Menu/Home	 Menu
 7	 7	 Exit	 Exit
 8	 8	 Up	 Up
 9	 9	 Down	 Down
 0	 0	 Right	 Right
 [i+]/Info/Timer	 Info	 Left	 Left





Original		Replacement		Original		Replacement	
	Enter		Ok		[≡]		Text
	DVD Top		D. Menu		I-II/Disc Navi		Dual
	Red		Red		DVD/[I<>>]/[≡+]		Smart
	Green		Green		HDD/[<I>]/[≡◇]		Media
	Yellow		Yellow				
	Blue		Blue				
	Rec		Rec				
	Pause		Pause				
	Stop		Stop				
	Play		Play				
	I<<<		I<<<				
	>>>I		>>>I				
	<<<		<<<				
	>>>		>>>				
	[...]		Subt				
	[≡?]		List				
	[≡i]		Options				

