 



 





 









 

 

 

 



 










 
 
 








 

 



 


 

 







Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Source		AV / Input / RDS		Home		Menu / Home
	1		1		P-		CH- / Page-
	2		2		Netflix		Shift + Red / Netflix /
	3		3		YouTube		Shift + Yellow / YouTube /
	4		4		Guide		Guide / EPG / -/-
	5		5		Up		Up
	6		6		i		Info / Angle
	7		7		Left		Left
	8		8		OK		OK
	9		9		Right		Right
	Lang		Audio / Lang I/II		Down		Down
	0		0		Back		Back / Return
	TXT		Text / Goto		Exit		Exit / Cancel / Clear
	Vol+		Vol+		*1		Smart / List
	Mute		Mute / Dimmer		prime video		Shift + Blue / Prime
	P+		CH+ / Page+		Red		Red / Netflix / Search





Original		Replacement	
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

Original		Replacement	

