



Original		Replacement		Original		Replacement	
	Power		Power		4		4
	Source		AV		5		5
	Rec		Rec		6		6
	Play		Play		7		7
	Pause		Pause		8		8
	Stop		Stop		9		9
	Lang		Dual		0		0
	<<		<<		Tv		TV/R
	>>		>>		Recall		Pre Ch
	[≡]..		Subt		Up		Up
	Red		Red		Down		Down
	Green		Green		Right		Right
	Yellow		Yellow		Left		Left
	Blue		Blue		OK		Ok
	1		1		Menu		Menu
	2		2		Back		Back
	3		3		Exit		Exit





Original	Replacement	Original	Replacement
Q.Menu	D. Menu		
World	Media		
Music/Photo/Video	Smart		
*/o	3D		
*/Q	Eject		
Tv List	List		
Text	Text		
i	Info		
Size	Format		
Vol+	Vol +		
Vol-	Vol -		
Mute	Mute		
P+	Ch +		
P-	Ch -		

Original	Replacement

