










 

 

 
 


 




 


 

 







	Original	Replacement		Original	Replacement
	Power		Power		List
	TV		TV/R		Q.View
	Input		AV		PR+
	Mute		Mute		PR-
	PSM		Smart		Up
	SSM		Media		Down
	I/II		Dual		Right
	1		1		Left
	2		2		Ok
	3		3		Vol +
	4		4		Vol -
	5		5		Menu
	6		6		Sleep
	7		7		ARC/*
	8		8		Text
	9		9		Red
	0		0		Green





Original		Replacement		Original	Replacement
	Yellow		Yellow		
	Blue		Blue		
	Hold		Subt		
	Size		Format		
	Mix		D. Menu		
	Time		Shift + AV		
	Reveal		3D		
	Index		Info		
	Mode		Guide		
	Update		Pre Ch		

