

























 





 



 

 



 




 


 



 

 


 



 

 






 
Original	Replacement
 Power	 Power
 Drive Select	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 CH/Page+	 CH+ / Page+
 Last View	 Fav / Marker / PC
 CH/Page-	 CH- / Page-
 Radio/Tv	 TV/Radio /
 Internet	 Smart / List

Original	Replacement
 Skype	 Shift + Smart / List
 I<< Skip	 I<< / Preset-
 Skip >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 << / Tune-	 << / Tune-
 Option	 Shift + Setup / OPT / Tools
 >> / Tune+	 >> / Tune+
 Pause / Step / Freeze	 Pause / Step / Freeze
 Return	 Back / Return
 Info / Angle	 Info / Angle
 Exit / Cancel / Clear	 Exit / Cancel / Clear
 Guide / EPG / -/-	 Guide / EPG / -/-
 Up	 Up
 Pop-Up menu/Direct	 D.Menu / Top
 Down	 Down
 Right	 Right





Original	Replacement
 Left	 Left
 Function Menu	 Menu / Home
 OK	 OK
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Rec	 Rec / Rec Mode
 Audio	 Audio / Lang I/II
 Text	 Text / Goto
 STTL	 Subtitle / EQ
 Display	 Display / Media
 Chapter	 Zoom / Size
 Setup	 Setup / OPT /
 Prog/Check	 Shift + TV/Radio / Program
 Time Slip	 Picture / Format
 DEL	 Sleep / Timer

Original	Replacement
 CH- Tv	 Shift + CH- /
 CH+ Tv	 Shift + CH+ /
 Vol- Tv	 Vol-
 Vol+ Tv	 Vol+
 Power Tv	 Shift + Power
 AV Input Tv	 Shift + AV / Input / RDS
 Manual Skip +60s	 Shift + Right
 Manual Skip -10s	 Shift + Left

