 



 







 



 











 











 





 

 

 













 







Original	Replacement	Original	Replacement
 Standby / On	 Power	 Last PR	 Smart / List
 Open / Close	 Eject / Surround	 0 / A.DUB	 0
 1 / ATR TRK -	 1	 TV / VCR	 AV / Input / RDS
 2 / ATR	 2	 DVD	 Shift + 2
 3 / ATR TRK +	 3	 TV View	 TV/Radio /
 Volume +	 Vol+	 VCR	 Shift + 4
 4 / Shuttle <<	 4	 <<	 << / Tune-
 5 / Shuttle	 5	 Stop	 Stop / Hold
 6 / Shuttle >>	 6	 Play / Pause	 Play / Slow
 Prog +	 CH+ / Page+	 Play / Pause	 Pause / Step / Freeze
 Volume -	 Vol-	 >>	 >> / Tune+
 Prog -	 CH- / Page-	 I<< / Rec	 I<< / Preset-
 7 / SVHS	 7	 I<< / Rec	 Rec / Rec Mode
 8	 8	 Angle / Timer	 Info / Angle
 9	 9	 Angle / Timer	 Sleep / Timer
 Mute	 Mute / Dimmer	 >>I / Frame/Step	 >>I / Preset+
 3D Sound	 D.Menu / Top	 Zoom / Speed	 Zoom / Size





	Original	Replacement	Original	Replacement
	Subtitle	 Subtitle / EQ		
	Display	 Display / Media		
	Audio	 Audio / Lang I/II		
	Setup	 Setup / OPT /		
	Up	 Up		
	Menu	 Menu / Home		
	Left	 Left		
	Enter	 OK		
	Right	 Right		
	Title	 Sound / Title		
	Down	 Down		
	Clear	 Exit / Cancel / Clear		
	Mark / Index	 Fav / Marker / PC		
	Return / CLK/CTR	 Back / Return		
	A-B / Mode /	 Yellow / YouTube / Repeat		

