 



 
 


 








Original	Replacement
 Smart	 Smart / List
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 CH List	 Shift + Smart / List
 0	 0
 Source	 AV / Input / RDS
 Home	 Shift + Menu /
 Up	 Up

Original	Replacement
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Netflix	 Shift + Red / Netflix /
 Google Play	 Display / Media
 Vol+	 Vol+
 [i+]	 Info / Angle
 P+	 CH+ / Page+
 Vol-	 Vol-
 Guide	 Guide / EPG / -/-
 P-	 CH- / Page-
 <</Reveal	 << / Tune-
 Play/Index	 Play / Slow





Original	Replacement
 >>/Mix	 >> / Tune+
 Subtitle	 Subtitle / EQ
 Pause/Timeshift	 Pause / Step / Freeze
 Stop/Cancel	 Stop / Hold
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 FAV/Size	 Fav / Marker / PC
 AD/Subpage	 Shift + AV / Input / RDS
 Nicam I/II/Hold	 Shift + Stop /

Original	Replacement

