 



 







 







 


 
 



 



 

 

 

















 

 





 









Original		Replacement		Original		Replacement	
	Sleep		Sleep / Timer		Vol+		Vol+
	On/Standby		Power		CH-		CH- / Page-
	CBL/SAT		0		Mute		Mute / Dimmer
	DVD		2		Vol-		Vol-
	Blu-ray		4		Info		Info / Angle
	Game		Fav / Marker / PC		Option		Shift + Setup / OPT / Tools
	AUX		7		Option		Menu / Home
	Media Player		Display / Media		Up		Up
	TV Audio		1		Left		Left
	CD		3		Enter		OK
	Tuner		6		Right		Right
	iPod/USB		8		Back		Back / Return
	Phono		Guide / EPG / -/--		Down		Down
	M-XPort		5		Setup		Setup / OPT /
	Network		9		I<</Tune-		I<< / Preset-
	Internet Radio		Smart / List		I<</Tune-		<< / Tune-
	CH+		CH+ / Page+		Play / Pause		Play / Slow

 

 



 



 

 

 

 

 

 

 





 









Original		Replacement		Original	Replacement
	Play / Pause		Pause / Step / Freeze		
	>>I/Tune+		>> / Tune+		
	>>I/Tune+		>>I / Preset+		
	Favorite Station 1		Sound / Title		
	Favorite Station 2		Audio / Lang I/II		
	Favorite Station 3		Subtitle / EQ		
	Red/Movie		Red / Netflix / Search		
	Green/Music		Green / APP / Repeat		
	Blue/Game		Blue / Prime Video / Random		
	Yellow/Pure		Yellow / YouTube / Repeat		




 


 



Original	Replacement
 Sleep	 Sleep / Timer
 On/Standby	 Power
 CBL/SAT	 0
 DVD	 2
 Blu-ray	 4
 Game	 Fav / Marker / PC
 AUX	 7
 Media Player	 Display / Media
 TV Audio	 1
 CD	 3
 Tuner	 6
 iPod/USB	 8
 Phono	 Guide / EPG / -/--
 M-XPort	 5
 Network	 9
 Internet Radio	 Smart / List
 CH+	 CH+ / Page+

Original	Replacement
 Vol+	 Vol+
 CH-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Option	 Setup / OPT /
 Option	 Menu / Home
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 I<</Tune-	 I<< / Preset-
 I<</Tune-	 << / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 >>I/Tune+	 >>I / Preset+





Original	Replacement	Original	Replacement
 >> /Tune+	 >> / Tune+		
 Favorite Station 1	 Sound / Title		
 Favorite Station 2	 Audio / Lang I/II		
 Favorite Station 3	 Subtitle / EQ		

