 




 
 



 

 

 

 



 
 
 




 
 
 

 
 
 
 
 
 
 
 
 
 
 


 
 

 



 

 

 

 

 



 

 
 
 

 

 

 
 




Original	Replacement	Original	Replacement
	Power		Power
	Display	 + 	Shift + Info
	Nicam/A2		List
	Mute		Mute
	PMode	 + 	Shift + Format
	SMode	 + 	Shift + Dual
	Sleep		Sleep
	Aspect		3D
	LCD-Menu		Menu
	DVB-Menu		D. Menu
	Source		AV
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Ch+		Ch +
	Ch-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Hold		Media
	Red		Red





Original	Replacement	Original	Replacement
 Green	 Green		
 Yellow	 Yellow		
 Cyan	 Blue		
 Index	 Smart		
 Size	 Format		
 Reveal	 Options		
 Subpage	 Eject		
 Tv/Radio	 TV/R		
 Lang	 Dual		
 Page-	 I<<		
 Page+	 >>I		
 Subtitle	 Subt		
 Epg	 Guide		
 Fav	 Pre Ch		
 Info	 Info		

