

 

 

 

 

 

 

 

 

 

 

 

 

 
 
 

 



 

 

 

 

 

 

 

 

 





 

 



 

 

 



 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	TV		Smart / List
	TV		Shift + 1
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Back / Return
	0		0
	Info		Info / Angle
	Zoom		Zoom / Size
	Picture		Picture / Format
	Sound		Sound / Title
	Vol +		Vol+
	CH +		CH+ / Page+
	Vol -		Vol-
	Mute		Mute / Dimmer
	CH -		CH- / Page-
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	I / II		Audio / Lang I/II
	Still		Shift + Pause / Step /
	HDMI		Shift + 0





Original	Replacement
 VGA	 Shift + 4
 VGA	 Display / Media
 DMP	 D.Menu / Top
 Subtitle	 Subtitle / EQ
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 I<<<	 I<<< / Preset-
 >>>I	 >>>I / Preset+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 Size	 Shift + Zoom / Size

Original	Replacement
 Reveal	 Guide / EPG / -/--
 Cancel	 Shift + Exit / Cancel / Clear
 Hold / Sleep	 Sleep / Timer
 Hold / Sleep	 Shift + Stop /
 Index	 Fav / Marker / PC
 Sub.Code	 Eject / Surround
 Mix	 Shift + Text /

