



Original	Replacement	Original	Replacement
	Power		Sleep / Timer
	Mute		AV / Input / RDS
	1		CH+ / Page+
	2		Vol+
	3		Display / Media
	4		CH- / Page-
	5		Vol-
	6		Red / Netflix / Search
	7		Green / APP / Repeat
	8		Yellow / YouTube / Repeat
	9		Blue / Prime Video / Random
	Text		Up
	0		Down
	Recall		Right
	P.Mode		Left
	S.Mode		Menu / Home
	Audio		OK





Original	Replacement
Exit	Exit / Cancel / Clear
Subtitle	Subtitle / EQ
Index	Info / Angle
Size	Zoom / Size
Reveal	D.Menu / Top
Mix	Setup / OPT /
Play	Play / Slow
Pause/Hold	Pause / Step / Freeze
I<</Cancel	I<< / Preset-
>>I/Subpage	>>I / Preset+
EPG	Guide / EPG / -/--
FAV	Fav / Marker / PC
Stop	Stop / Hold
<</FAV-	<< / Tune-
>>/FAV+	>> / Tune+
Media	+  Shift + Display / Media
Rec	Rec / Rec Mode

Original	Replacement
Timeshift	Smart / List
Tv/Radio	TV/Radio /

