 

 





 

 



 

 

 

 



 

 

 

 







Original	Replacement
 Standby/On	 Power
 1/5Beam	 1
 2/ST+3Beam	 2
 3/3Beam	 3
 4/Stereo	 4
 5/Target	 5
 6	 6
 7/Music	 7
 8/Movie	 8
 9/Vol Mode	 9
 0/Sports	 0
 +10/Off	 Guide / EPG / -/--
 Surround	 Eject / Surround
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left

Original	Replacement
 AUX	 Smart / List
 Enter	 OK
 Menu	 Menu / Home
 Return	 Back / Return
 Test	 Text / Goto
 CH Level	 Info / Angle
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 (o)	 Sound / Title
 Input Mode	 AV / Input / RDS
 Sleep	 Sleep / Timer
 Power AUX	 Shift + Power
 1 AUX	 Shift + 1
 2 AUX	 Shift + 2
 3 AUX	 Shift + 3
 4 AUX	 Shift + 4





Original	Replacement	Original	Replacement
TARGET 5	5 AUX SHIFT + 5		
6	6 AUX SHIFT + 6		
MUSIC 7	7 AUX SHIFT + AUX - HDD		
MOVIE 8	8 AUX SHIFT + 8		
VOL. MODE 9	9 AUX SHIFT + 9		
SPORTS 0	0 AUX SHIFT + HDMI - SAT		












 
Original	Replacement
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
CH+	CH+ / Page+
CH-	CH- / Page-
Tv Vol+	Vol+
Tv Vol-	Vol-
Tv Input	AV / Input / RDS
Tv Mute	Mute / Dimmer

Original	Replacement
Input 1	Smart / List
Input 2	Display / Media










 


Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/--
 Menu	 Menu / Home
 Return	 Back / Return
 Play	 Play / Slow
 <<	 << / Tune-
 >>	 >> / Tune+

Original	Replacement
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 STB	 Shift + 3





Original		Replacement		Original	Replacement
	Power		Power		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Play		Play / Slow		
	<<		<< / Tune-		
	>>		>> / Tune+		
	Stop		Stop / Hold		
	Pause		Pause / Step / Freeze		

