
 

 







Original	Replacement	Original	Replacement
 Standby	 Power	 0	 0
 P.STD	 Shift + Format	 -/--	 Shift + Guide
 10+	 Pre Ch	 Source	 AV
 Open / Close	 Eject	 Nicam	 List
 Scan	 Smart	 DTV / DVD	 TV/R
 Swap	 Back	 P +	 Ch +
 Call	 Sleep	 P -	 Ch -
 Mute	 Mute	 V +	 Vol +
 1	 1	 V -	 Vol -
 2	 2	 Menu	 Menu
 3	 3	 Zoom	 Shift + Eject
 4	 4	 Audio	 Dual
 5	 5	 Stop	 Stop
 6	 6	 Setup	 Options
 7	 7	 Pause / Step	 Pause
 8	 8	 Tune	 Shift + List
 9	 9	 << Rev	 <<





Original	Replacement	Original	Replacement
 >> Fwd	 >>	 Slow	 Shift + Play
 I<< Prev	 I<<	 D.Call	 Shift + Sleep
 >>I Next	 >>I	 Repeat	 Shift + Text
 D. Menu	 D. Menu	 Subcode	 Shift + Subt
 Exit	 Exit	 Mix	 Media
 EPG / Program	 Guide	 Text	 Text
 Up	 Up	 Hold	 Shift + Pause
 Down	 Down	 Reveal	 3D
 Right	 Right	 Size	 Format
 Left	 Left	 Time	 Shift + AV
 OK / Play / Enter	 Ok	 Mode	 Shift + 3D
 OK / Play / Enter	 Play	 Red	 Red
 Subtitle	 Subt	 Green / DTV /	 Green
 FAV / Angle	 Shift + Pre Ch	 Yellow / Lang	 Yellow
 i / Title / PBC	 Info	 Blue / Timer	 Blue
 Search	 Shift + TV/R		
 A - B	 Shift + Red		

