



Original	Replacement	Original	Replacement
 Power	 Power	 Recall	 Back
 Mute	 Mute	 Sleep	 Sleep
 Input	 AV	 Menu	 Menu
 Aspect	 Format	 Tv/Radio	 TV/R
 Nicam	 3D	 Display	 Info
 P.Mode	 Shift + Format	 Exit	 Exit
 S.Mode	 Shift + Dual	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 CH+	 Ch +
 6	 6	 CH-	 Ch -
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 FAV	 Pre Ch
 0	 0	 FAV+	 Shift + Ch +





Original		Replacement		Original		Replacement	
	FAV-		Shift + Ch -		Yellow		Yellow
	EPG		Guide		Blue		Blue
	Text		Text				
	Hold		Options				
	Lang		Dual				
	Subtitle		Subt				
	Index/ <<		<<				
	Size/ >>		>>				
	Reveal/ <<		<<				
	Subpage/ >>		>>				
	Rec		Rec				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Media		Media				
	Red		Red				
	Green		Green				

