



 

 

 



 

 

 



 



 

 

 





 

 

 



 



 

 

 



 



 



 









Original		Replacement		Original		Replacement	
	Power		Power		EPG		Guide / EPG / -/--
	Sleep		Sleep / Timer		Mute		Mute / Dimmer
	TV		Shift + 1		CH List		Smart / List
	TV		TV/Radio /		Display		Display / Media
	AV		AV / Input / RDS		Vol+		Vol+
	Wide		Picture / Format		CH+		CH+ / Page+
	Scart		Shift + 2		Vol-		Vol-
	PC		Shift + Fav / Marker / PC		(([O]))		Sound / Title
	e		Setup / OPT /		CH-		CH- / Page-
	Menu		Menu / Home		1		1
	Up		Up		2		2
	Back		Back / Return		3		3
	Left		Left		4		4
	OK		OK		5		5
	Right		Right		6		6
	MPX		Info / Angle		7		7
	Down		Down		8		8





Original	Replacement	Original	Replacement
9	9		
Recall	+ Shift + Back / Return		
0	0		
Enter	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Index	Play / Slow		
Subtitle	Subtitle / EQ		
Subpage	Pause / Step / Freeze		
Reveal	Rec / Rec Mode		
Size	Zoom / Size		
TTX/MIX	Text / Goto		
Hold	Stop / Hold		

