











 
 

 
 
 

 
 
 

 
 
 

 
 


 
 
 



 






 
 

 



 







 




 

 





Original	Replacement	Original	Replacement
 Power	 Power	 Home/@	 Smart
 Source	 AV	 +P	 Ch +
 1	 1	 -P	 Ch -
 2	 2	 Menu	 Menu
 3	 3	 Q.Menu	 D. Menu
 4	 4	 Back	 Back
 5	 5	 Exit	 Exit
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 OK	 Ok
 TV	 TV/R	 WWW	 Media
 Recall	 Pre Ch	 Music/Photo/Video	 Options
 Vol+	 Vol +	 Guide	 Guide
 Vol-	 Vol -	 Help	 Info
 Mute	 Mute	 */O	 Format





Original		Replacement		Original	Replacement
	[≡]		Text		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		
	Lang.		Dual		
	Sleep		Sleep		
	[-O-]		Subt		
	<<		<<		
	Pause		Pause		
	>>		>>		
	Rec		Rec		
	Play		Play		
	Stop		Stop		

