


 



 

 

 


 
 



 

 
 

 

 

 







Original		Replacement		Original		Replacement	
	Power		Power		i		Info
	Mute		Mute		APP		Media
	VF		Format		Subtitle		Subt
	AR		3D		Text		Text
	AUX		AV		Audio		Dual
	TV / Radio		TV/R		FAV		Pre Ch
	1		1		EPG		Guide
	2		2		Up		Up
	3		3		Right		Right
	4		4		Down		Down
	5		5		Left		Left
	6		6		OK / List		Ok
	7		7		Menu		Menu
	8		8		Exit		Exit
	9		9		V +		Vol +
	0		0		V -		Vol -
	Previos program		Back		Sleep Timer		Sleep



