



Original	Replacement
Open / Close	Eject / Surround
Operate	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Shift + Guide / EPG / -/--
CH +	CH+ / Page+
CH -	CH- / Page-
C / Erase	Shift + Exit / Cancel / Clear
Direct	Setup / OPT /

Original	Replacement
i	Info / Angle
Guide	Guide / EPG / -/--
Rec Mode	Shift + Rec / Rec Mode
Input	AV / Input / RDS
Timer On / Off	Sleep / Timer
Time Shift	Text / Goto
HDD	Shift + 7
DVD	Shift + 2
TV / DVD	TV/Radio /
Start Menu	Menu / Home
Up	Up
Rec List / DVD Top Menu	Smart / List
Right	Right
Down	Down
Original / Playlist / DVD Menu	D.Menu / Top
Left	Left
Exit	Exit / Cancel / Clear





Original		Replacement		Original		Replacement	
	Return		Back / Return		>> / F.Adv II> / Day +		>> / Preset+
	<< REV		<< / Tune-		Still / Pause		Pause / Step / Freeze
	Set / Enter		OK		Skip Search	+	Shift + Red / Netflix /
	Play		Play / Slow		Chapter Mark		Fav / Marker / PC
	Green		Green / APP / Repeat		Function		Picture / Format
	Red		Red / Netflix / Search		REC Pause	+	Shift + Pause / Step /
	Blue		Blue / Prime Video / Random		On Screen Tamper Proof		Vol+
	>> FWD		>> / Tune+		RGB OFF Tamper Proof		Vol-
	Yellow		Yellow / YouTube / Repeat		Display / Back Light		Display / Media
	Slow	+	Shift + Play /		REC Stop	+	Shift + Stop /
	REC		Rec / Rec Mode		Direct REC TV	+	Shift + Eject / Surround
	Angle	+	Shift + Info / Angle				
	Stop / Live		Stop / Hold				
	Subtitle		Subtitle / EQ				
	Audio		Audio / Lang I/II				
	Replay		Sound / Title				
	I<< / <II F.Adv / Day -		I<< / Preset-				

