



 





| Original | Replacement | Original | Replacement |
|---|--|--|--|
|  Standby |  Power |  Pic.Mode |  Picture / Format |
|  Mute |  Mute / Dimmer |  S.Mode |  Sound / Title |
|  1 |  1 |  Up |  Up |
|  2 |  2 |  Left |  Left |
|  3 |  3 |  OK |  OK |
|  4 |  4 |  Right |  Right |
|  5 |  5 |  Exit |  Exit / Cancel / Clear |
|  6 |  6 |  Down |  Down |
|  7 |  7 |  Menu |  Menu / Home |
|  8 |  8 |  Source |  AV / Input / RDS |
|  9 |  9 |  Vol+ |  Vol+ |
|  CH.List |  Smart / List |  Tv/Radio |  TV/Radio / |
|  0 |  0 |  CH+ |  CH+ / Page+ |
|  Recall |  Back / Return |  Vol- |  Vol- |
|  Aspect |  Shift + Picture / Format |  Display |  Display / Media |
|  Sleep |  Sleep / Timer |  CH- |  CH- / Page- |
|  Audio |  Audio / Lang I/II |  Red |  Red / Netflix / Search |





| Original | Replacement |
|---|---|
|  |  Green / APP / Repeat |
|  |  Yellow / YouTube / Repeat |
|  |  Blue / Prime Video / Random |
|  |  Rec / Rec Mode |
|  |  D.Menu / Top |
|  |  Shift + Sleep / Timer |
|  |  Shift + Rec / Rec Mode |
|  |  Info / Angle |
|  |  Setup / OPT / |
|  |  Text / Goto |
|  |  Subtitle / EQ |
|  |  Shift + Stop / |
|  |  Play / Slow |
|  |  Zoom / Size |
|  |  Pause / Step / Freeze |
|  |  Stop / Hold |
|  |  I<< / Preset- |

| Original | Replacement |
|---|---|
|  |  >>I / Preset+ |
|  |  << / Tune- |
|  |  >> / Tune+ |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

