



Original	Replacement
Standby/On	Power
Program/Rando	Shift + Sleep
Return	Back
Open/Close	Eject
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Angle	Smart
A.Replay	D. Menu
Zoom	Shift + Eject

Original	Replacement
Audio	Dual
Sleep	Sleep
Test	Guide
Clear	Exit
Picture Mode	Format
Trim	AV
RDS	Subt
Surround	Shift + List
Tune/Band	Green
Mute	Mute
Bass	Yellow
Function	Red
Sound	Shift + Dual
Vol+	Vol +
Vol-	Vol -
Menu	Menu
Setup	Options





Original	Replacement
Top Menu	+ Shift + Menu
On Screen	Info
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok
Pause	Pause
Play	Play
Stop	Stop
<</Tune/PTY-	<<
Tune/PTY+ />>	>>
<</Preset+/PTY	<<
T+/PTY CHK	>>
< /R.Slow	Ch -
F.Slow/ >	Ch +
S.T.CH	Media

Original	Replacement
S.T.On/Off	List
Search Mode	TV/R
L.Memo	3D
A-B Rep	+ Shift + Text
Repeat	Text

