





 
 



 

 


Original	Replacement
Standby/On	Power
Program/Rando	Shift + Sleep
Return	Back
Open/Close	Eject
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Angle	Smart
A.Replay	D. Menu
Zoom	Shift + Eject

Original	Replacement
Audio	Dual
Sleep	Sleep
Test	Guide
Clear	Exit
Picture Mode	Format
Trim	AV
RDS	Subt
Surround	Shift + List
Tune/Band	Green
Mute	Mute
Bass	Yellow
Function	Red
Sound	Shift + Dual
Vol+	Vol +
Vol-	Vol -
Menu	Menu
Setup	Options





Original	Replacement
 Top Menu	 +  Shift + Menu
 On Screen	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Pause	 Pause
 Play	 Play
 Stop	 Stop
 <</Tune/PTY-	 <<
 Tune/PTY+>>	 >>
 I<</Preset+/PTY	 I<<
 Preset+/PTY	 >>I
 <I/R.Slow	 Ch -
 F.Slow/I>	 Ch +
 S.T.CH	 Media

Original	Replacement
 S.T.On/Off	 List
 Search Mode	 TV/R
 L.Memo	 3D
 A-B Rep	 +  Shift + Text
 Repeat	 Text

