 






 

 


 


 
 





 

 
 

 


 
 

 


 
 













 


 





 





 

 



 






	Original	Replacement		Original	Replacement
	Standby		Power		Right
	Rec PVR		Rec		Left
	PVR List		List		Ok
	Mute		Mute		Vol +
	EPG		Guide		Vol -
	Audio		Dual		1
	Info		Info		2
	TTX		Text		3
	Subtitle		Subt		4
	Menu		Menu		5
	Exit		Exit		6
	Favourite		Pre Ch		7
	Tv/Radio		TV/R		8
	CH+		Ch +		9
	CH-		Ch -		0
	Up		Up		Recall
	Down		Down		Goto
					Back
					AV





	Original	Replacement	Original	Replacement
	<<		<<	<<
	>>		>>	>>
	<<		<<	<<
	>>		>>	>>
	Play		Play	Play
	Pause		Pause	Pause
	Stop		Stop	Stop
	Repeat		Shift +	REPEAT Text
	Red		Red	Red
	Green		Green	Green
	Yellow		Yellow	Yellow
	Blue		Blue	Blue

