


 
 
 











 

 

 







 




 




 

 
 


 












 

 





 





Original		Replacement		Original		Replacement	
	Standby		Power		Up		Up
	Mute		Mute		Down		Down
	PN		Smart		Right		Right
	Open/Close		Eject		Left		Left
	<<		<<		OK		Ok
	>>		>>		Vol+		Vol +
	Play		Play		Vol-		Vol -
	Pause		Pause		1		1
	Stop		Stop		2		2
	I<<		I<<		3		3
	>>I		>>I		4		4
	Setup		Menu		5		5
	Source		AV		6		6
	Info		Info		7		7
	Return/Exit		Back		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0





Original	Replacement
Slow	Media
Goto	Options
Program	Sleep
Title/TTX	Text
Audio	Dual
Subtitle	Subt
Red/Repeat	Red
Green/A-B	Green
Yellow/Menu	Yellow
Blue/Angle	Blue
EPG	Guide
Favorite	Pre Ch
Tv/Radio	TV/R
Record	Rec

Original	Replacement

