
 
 


 


 
 











 


 
 




Original		Replacement		Original		Replacement	
	Power		Power		Right		Right
	Info		Info / Angle		Vol+		Vol+
	Lang		Audio / Lang I/II		List		Smart / List
	Mute		Mute / Dimmer		CH-		CH- / Page-
	[...]		Subtitle / EQ		Down		Down
	♥		Fav / Marker / PC		←		Back / Return
	▲		Shift + Up		1		1
	[≡]		Text / Goto		2		2
	EPG		Guide / EPG / -/--		3		3
	▼		Shift + Down		[<>]		Picture / Format
	Menu		Menu / Home		4		4
	CH+		CH+ / Page+		5		5
	Up		Up		6		6
	Exit		Exit / Cancel / Clear		TV/R		TV/Radio /
	Left		Left		7		7
	Vol-		Vol-		8		8
	OK		OK		9		9





Original	Replacement
	0
	I<< / Preset-
	<< / Tune-
	>> / Tune+
	>>I / Preset+
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Rec / Rec Mode
	Sleep / Timer
	Red / Netflix / Search
	Eject / Surround
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

Original	Replacement

