 
 



 
 

 

 

 




Original	Replacement	Original	Replacement
 Standby	 Power	 Menu	 Menu
 Mute	 Mute	 EPG	 Guide
 1	 1	 Exit	 Exit
 2	 2	 CH+	 Ch +
 3	 3	 CH-	 Ch -
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 OK	 Ok
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 FAV	 Pre Ch	 Text	 Text
 Audio	 Dual	 Red	 Red
 Recall	 Back	 Green	 Green
 Subtitle	 Subt	 Yellow	 Yellow
 Info	 Info	 Blue	 Blue





	Original	Replacement	Original	Replacement
	Rec List	 List		
	Tv/Radio	 TV/R		
	Stop	 Stop		
	Pause	 Pause		
	<<	 <<		
	>>	 >>		
	Record	 Rec		

