 

 
 
 

 





Original	Replacement
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 TV	 TV/R
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Replacement
 World/Internet	 Smart
 P+	 Ch +
 P-	 Ch -
 Menu	 Menu
 Q.Menu	 D. Menu
 Back	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 i	 Info
 Photo/Music/Cam	 Media
 Guide	 Guide
 */O	 Format
 */Q	 3D





Original	Replacement	Original	Replacement
[≡]/Text	REPEAT TEXT Text		
Red	A Red		
Green	B Green		
Yellow	C Yellow		
Blue	D Blue		
LANG.	SOUND DUAL Dual		
[≡].	AD SUBT Subt		
[-O-]	ZOOM Eject		
<<	<<		
Pause	Pause		
>>	>>		
Rec	REC MODE Rec		
Play	PLAY MODE Play		
Stop	Stop		

