
 


 


 


 


 


 


 

 

 



 







 



 



 



 



 



 

 

 





Original		Replacement		Original		Replacement	
<<		<< / Tune-		8		8	
>>		>> / Tune+		9		9	
I<<		I<< / Preset-		[≡?]/Source		Eject / Surround	
>>I		>>I / Preset+		0		0	
Play		Play / Slow		O)/I/II/Audio		Audio / Lang I/II	
Pause		Pause / Step / Freeze		Menu		Menu / Home	
Stop		Stop / Hold		Exit		Exit / Cancel / Clear	
	Power		Power			Up	
	[≡i]/Info		Info / Angle			Left	
	Mute		Mute / Dimmer			OK	
	1		1			Right	
	2		2			Down	
	3		3			CH+ / Page+	
	4		4			Display / Media	
	5		5			Vol+	
	6		6			CH- / Page-	
	7		7			Smart / List	



