 













 
 
 
 



 
 
 




 



 




















 
 



 


 
 
 



 




Original	Replacement	Original	Replacement
 Power	 Power	 EPG	 Shift + Guide
 Mute	 Mute	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 Enter	 Ok
 5	 5	 CH+	 Ch +
 6	 6	 CH-	 Ch -
 7	 7	 FAV+	 Shift + Ch +
 8	 8	 FAV-	 Shift + Ch -
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 -/--	 Guide	 Sleep	 Sleep
 Recall	 Back	 P.Mode	 Shift + Format
 Menu	 Menu	 S.Mode	 Shift + Dual
 Exit	 Exit	 FAV	 Pre Ch
 Tv/AV	 AV	 Display	 Info





Original	Replacement
P.Size	Format
Nicam/A2	Options
Tv/Radio	TV/R
Text	Text
Index	Smart
Subtitle	Subt
I<</Hold	I<<
Audio	Dual
>>I/Size	>>I
<</Subpage	<<
>>/Reveal	>>
Play	Play
Pause	Pause
Stop	Stop
Rec/PVR	Rec
Media	Media
Red	Red

Original	Replacement
Green	Green
Yellow	Yellow
Cyan	Blue

