













 

 




 



 
 



 

 




 

 





| Original  | Replacement  |
|---|--|
|  3D      |  Picture / Format |
|  Power   |  Power            |
|  Mute    |  Mute / Dimmer    |
|  1       |  1                |
|  2       |  2                |
|  3       |  3                |
|  4       |  4                |
|  5       |  5                |
|  6       |  6                |
|  7       |  7                |
|  8      |  8               |
|  9     |  9              |
|  Prog+ |  CH+ / Page+    |
|  0     |  0              |
|  Vol+  |  Vol+           |
|  Prog- |  CH- / Page-    |
|  Vol-  |  Vol-           |

| Original   | Replacement   |
|--|---|
|  Up/CH+     |  Up                      |
|  Left/Vol-  |  Left                    |
|  OK         |  OK                      |
|  Right/Vol+ |  Right                   |
|  Down/CH-   |  Down                    |
|  Menu       |  Menu / Home             |
|  Exit       |  Exit / Cancel / Clear   |
|  Info       |  Info / Angle            |
|  EPG        |  Guide / EPG / -/--      |
|  List       |  Smart / List            |
|  TXT       |  Text / Goto            |
|  S-T      |  Sound / Title         |
|  Tv/R     |  TV/Radio /            |
|  Timer    |  Sleep / Timer         |
|  Audio    |  Audio / Lang I/II     |
|  Play     |  Play / Slow           |
|  Pause    |  Pause / Step / Freeze |



