








 


 


 
 



 





 
 



 
 
 
 




 
 

 









 
 











 






Original		Replacement		Original		Replacement	
	Standby		Power		Down		Down
	Rec PVR		Rec		Right		Right
	List PVR		Smart		Left		Left
	Mute		Mute		OK		Ok
	EPG		Guide		Vol+		Vol +
	Audio		Dual		Vol-		Vol -
	Info		Info		1		1
	DTV/VCR		Media		2		2
	TTX		Text		3		3
	Subtitle		Subt		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	Favourite		Pre Ch		7		7
	Tv/Radio		TV/R		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		Recall		Back







 
 

 


 


 
 



 



 

 
 
 

 
 
 
 
 




 
 








 






Original	Replacement	Original	Replacement
 GOTO	 AV		
 <<	 <<<		
 >>	 >>>		
 I<<	 I<<<		
 >>I	 >>>I		
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 Repeat	 SHIFT +  REPEAT TEXT Shift + Text		
 Red	 A Red		
 Green	 B Green		
 Yellow	 C Yellow		
 Blue	 D Blue		





	Original	Replacement		Original	Replacement
	Standby		Power		Down
	Rec PVR		Rec		Right
	List PVR		List		Left
	Mute		Mute		Ok
	EPG		Guide		Vol +
	Audio		Dual		Vol -
	Info		Info		1
	DTV/VCR		Media		2
	TTX		Text		3
	Subtitle		Subt		4
	Menu		Menu		5
	Exit		Exit		6
	Favourite		Pre Ch		7
	Tv/Radio		TV/R		8
	CH+		Ch +		9
	CH-		Ch -		0
	Up		Up		Recall
					Back





Original		Replacement		Original		Replacement	
	Goto		Options				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Repeat	 + 	Shift + Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

