










 
 
 

 
 
 

 

 

 

 

 



 

 







Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	TXT		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Replacement	Original	Replacement
	3D		Shift + 3
	?		Info / Angle
	@		D.Menu / Top
	Menu		Menu / Home
	Up		Up
	←		Back / Return
	Left		Left
	OK		OK
	Right		Right
	Tools		Setup / OPT /
	Down		Down
	Guide/Home		Guide / EPG / -/--
	Guide/Home		Smart / List
	Vol+		Vol+
	Source		AV / Input / RDS
	PR+		CH+ / Page+
	Vol-		Vol-





	Original	Replacement	Original	Replacement
	Mute	Mute / Dimmer		
	PR-	CH- / Page-		
	I<	I<< / Preset-		
	>I	>>I / Preset+		
	<<	<< / Tune-		
	>>	>> / Tune+		
	Rec	Rec / Rec Mode		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	Stop	Stop / Hold		
	Rec List	Display / Media		
	OQ	Audio / Lang I/II		
	[-]	Subtitle / EQ		

