










 





 






Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 Menu	 Menu	 Vol+	 Vol +
 Title	 TV/R	 Vol-	 Vol -
 Home	 Smart	 Audio	 Dual
 Zoom	 Eject	 Subtitle	 Subt
 Rotate	 Pre Ch	 Angle	 Red
 Thumbnails	 Media	 Up	 Up
 Subtitle ♦	 Options	 Down	 Down
 0	 0	 Right	 Right
 1	 1	 Left	 Left
 2	 2	 Play Enter	 Ok
 3	 3	 Play All	 Play
 4	 4	 Shuffle	 Yellow
 5	 5	 Info	 Info
 6	 6	 Back	 Back
 7	 7	 I<<	 I<<
 8	 8	 Pause/Step	 Pause





	Original	Replacement	Original	Replacement
	>>I	 >>I		
	<<	 <<		
	Stop	 Stop		
	>>	 >>		
	Slow	 B Green		
	Mute	 MUTE Mute		
	Repeat	 REPEAT TEXT Text		
	Repeat A-B	 ECO 3D 3D		
	Search	 SHIFT +  SEARCH TV/R Shift + TV/R		
	Video Output	 TIMER AV AV		

