


 
 






 



 

 

 





 
 


 



 


 

 


 

 


 



 

 

 





 

 






Original		Replacement		Original		Replacement	
	Standby		Power		Clear		Exit
	Open / Close		Eject		Setup		Options
	Mute		Mute		Search		TV/R
	OSD		Smart		Up		Up
	Step		Shift + Pause		Right		Right
	Recover		Media		Down		Down
	1		1		Left		Left
	2		2		Enter		Ok
	3		3		Subtitle		Subt
	4		4		Audio		Dual
	5		5		Play		Play
	6		6		Pause		Pause
	7		7		Stop		Stop
	8		8		I<<		I<<
	9		9		>>I		>>I
	0		0		<<		<<
	+10		Guide		>>		>>





Original	Replacement	Original	Replacement
	Angle		Format
	Zoom	+	Shift + Eject
	3D		3D
	Prog		Sleep
	Title		Info
	Repeat		Text
	A-B	+	Shift + Text
	Slow	+	Shift + Play
	Menu		Menu
	N/P		List
	Vol -		Vol -
	Vol +		Vol +
	PS		Yellow
	Audio Up	+	Shift + Dual

