 

 

 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 


 
 

 


 

 
 
 











 

 
 
 
 
 

 

 
 
 

 
 




Original	Replacement
 Power	 Power
 Eject/Auto	 Eject
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 SHIFT + -/-- Shift + Guide
 Recall	 FAV PRE-CH Pre Ch
 Vol+	 + VOL Vol +
 Vol-	 - VOL Vol -

Original	Replacement
 Aspect	 Format
 Audio	 Dual
 CH+	 Ch +
 CH-	 Ch -
 Display	 Info
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 LCD Menu	 Menu
 DVD Setup/Exit	 Exit
 DVD Setup/Exit	 Options
 Input	 AV
 P.Mode	 SHIFT + PICTURE FORMAT Shift + Format
 S.Mode	 SHIFT + SOUND DUAL Shift + Dual
 Sleep	 Sleep





Original	Replacement	Original	Replacement
	FAV SHIFT + FAV PRE-CH Shift + Pre Ch		Rec REC MODE Rec
	FAV- SHIFT + CH - Shift + Ch -		Stop Stop
	FAV+ SHIFT + CH + Shift + Ch +		I<< <<< I<<
	EPG GUIDE Guide		>>I >>> >>I
	Angle/Text REPEAT TEXT Text		Red/Prog A Red
	Zoom/Hold SHIFT + ZOOM Shift + Eject		Green/Intro B Green
	Tv/Radio SEARCH TV/R TV/R		Yellow/Repeat C Yellow
	Goto/Subpage ECO 3D 3D		Blue/A-B D Blue
	D.Disp/Reveal DISC NAV LIST List		
	Subtitle AD SUBT Subt		
	Title/Size HOME SMART Smart		
	D.Menu/Index E-MANUAL D.MENU D. Menu		
	I>/Media APP MEDIA Media		
	Play/Pause PLAY MODE Play		
	<< <<< <<		
	Play/Pause Pause		
	>> >>> >>		

