

 
 
 










 
 
 
 

 




 

 







 









 
 















Original	Replacement
 Power	 Power
 Open / Close	 Eject
 Dimmer /	 TV/R
 DVD	 Shift + 1
 Tuner / B and	 Shift + 2
 AUX	 Shift + 3
 NTSC/PAL / EZ	 Smart
 Mo/St / Slow	 Shift + Play
 Sub Title	 Subt
 Step	 Shift + Pause
 DSP / EQ	 Dual
 Repeat	 Text
 I<<	 I<<
 Stop	 Stop
 Play / Pause	 Play
 Play / Pause	 Pause
 >>I	 >>I

Original	Replacement
 DOLBY PLII	 Green
 Volume +	 Vol +
 Volume -	 Vol -
 Tuning + / CH +	 Ch +
 Tuning - / CH -	 Ch -
 DOLBY PLII	 Yellow
 Return	 Back
 Menu	 Menu
 Info	 Info
 Mute	 Mute
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Enter	 Ok
 1 / RDS Display	 1
 2	 2










 

 


 




 

 
Original	Replacement	Original	Replacement
 3 / TA	 3		Remain
 4 / PTY -	 4		Format
 5 / PTY Search	 5		
 6 / PTY +	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Sleep	 Sleep		
 Cancel	 Exit		
 Test Tone	 Red		
 Sound Edit	 Shift + Dual		
 P.Scan / Tuner	 Media		
 Zoom	 Shift + Eject		
 Logo	 3D		
 Slide Mode	 AV		
 Digest	 D. Menu		

Original	Replacement	Original	Replacement
	Remain		Format





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Menu		Menu
	Cancel		Exit
	1 / RDS Display		1
	2		2
	3 / TA		3
	4 / PTY -		4
	5 / PTY Search		5
	6 / PTY +		6
	7		7
	8		8
	9		9
	0		0
	Volume +		Vol +
	Volume -		Vol -
	Tuning + / CH +		Ch +

Original	Replacement	Original	Replacement
	Tuning - / CH -		Ch -
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Sleep		Sleep
	TV / Video /		TV/R
	Info		Info

