 





 


 
 

 
 

 
 


 

 

 



 








Original		Replacement		Original		Replacement	
	Standby		Power		Yellow		Yellow
	Mute		Mute		Blue / H.Lock		Blue
	P.Mode		Shift + Format		TV / DTV		TV/R
	S.Mode		Shift + Dual		CH.List		List
	Size		Format		Guide / Scan		Guide
	I>		Smart		Fav. / Still		Pre Ch
	Subtitle		Subt		Up		Up
	Timer		Shift + AV		Right		Right
	Mix		3D		Down		Down
	[ _ ]		Shift + Subt		Left		Left
	[ ? ] Reveal		Options		OK		Ok
	Message		Media		Info / Display		Info
	Text		Text		I/II / Nicam		Dual
	Source		AV		SUB / Sleep		Sleep
	Hold		Pause		ESC / Exit		Exit
	Red		Red		TV Menu		Menu
	Green		Green		DTV Menu		D. Menu





Original		Replacement		Original	Replacement
	Vol +		Vol +		
	Vol - -31552073C6594		Vol -		
	CH +		Ch +		
	CH -		Ch -		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Zoom		Eject		
	Recall		Back		

