








 

 



 

 

 

 

 

 







 



 

 

 

 

 

 

 





 









 






Original	Replacement	Original	Replacement
 Power	 Power	 V -	 Vol -
 Mute	 Mute	 Red / Status	 Red
 1	 1	 Green / Sleep	 Green
 2	 2	 Green / Sleep	 Shift + Power
 3	 3	 Blue / Review	 Blue
 4	 4	 Yellow / V-PP	 Yellow
 5	 5	 Yellow / V-PP	 Format
 6	 6	 Size	 3D
 7	 7	 Zoom	 Eject
 8	 8	 TV / TXT	 Text
 9	 9	 Cancel	 Back
 0	 0	 Index	 Info
 -/-	 Guide	 Stop	 Stop
 TV / AV	 AV	 Up / P +	 Up
 P +	 Ch +	 Down / P -	 Down
 P -	 Ch -	 Right / V +	 Right
 V +	 Vol +	 Left / V -	 Left

Original	Replacement	Original	Replacement
 MUTE	 MUTE	 TV	 SHIFT
 DVD	 SAT	 PLAY MODE	 REC MODE
 SAT	 SHIFT	 Play	 Pause
 SHIFT	 TV	 Stop	 Red dot
 TV	 DVD	 Fast Rewind	 Fast Forward
 DVD	 SAT	 SOUND	 AD
 SAT	 SHIFT	 SETTINGS	 OPT
 SHIFT	 TV	 LIST	 ECO
 TV	 DVD	 SEARCH	 PICTURE
 DVD	 SAT	 SLEEP	 3D
 SAT	 SHIFT	 E-MANUAL	 TIMER
 SHIFT	 TV	 REPEAT	 AV
 TV	 DVD	 ZOOM	 D.MENU
 DVD	 SAT	 TEXT	 TEXT
 SAT	 SHIFT	 CLEAR	 INFO
 SHIFT	 TV	 EXIT	 RETURN
 TV	 DVD	 HOME	 BACK
 DVD	 SAT	 SMART	 +
 SAT	 SHIFT	 APP	 -
 SHIFT	 TV	 MEDIA	 HOME
 TV	 DVD	 1	 SMART
 DVD	 SAT	 2	 APP
 SAT	 SHIFT	 3	 MEDIA
 SHIFT	 TV	 4	 +
 TV	 DVD	 5	 -
 DVD	 SAT	 6	 HOME
 SAT	 SHIFT	 7	 APP
 SHIFT	 TV	 8	 MEDIA
 TV	 DVD	 9	 +
 DVD	 SAT	 0	 -
 SAT	 SHIFT	 GUIDE	 +
 SHIFT	 TV	 FAV	 -
 TV	 DVD	 PRE-CH	 +
 DVD	 SAT	 A	 -
 SAT	 SHIFT	 B	 +
 SHIFT	 TV	 C	 -
 TV	 DVD	 D	 +





Original		Replacement		Original		Replacement	
	Menu		Menu				
	Menu		Ok				

